

| SPECIFICATIONS                 | PF-61-040   |  |  |
|--------------------------------|-------------|--|--|
| Flow Range                     | 220-440 GPM |  |  |
| System Inlet Connection        | 4" Flg      |  |  |
| System Outlet Connection       | 4" Flg      |  |  |
| Purge Connection               | 1 1/2" fpt  |  |  |
| Manual Air Bleed Valve         | 1/4" fpt    |  |  |
| Volume                         | 12 GAL      |  |  |
| Est. Weight, Dry               | 175 lbs     |  |  |
| Est. Weight, Operating         | 275 lbs     |  |  |
| Handhole – Inspection/Cleanout | 3" x 4"     |  |  |

**ENGINEERING • MANUFACTURING • SERVICE** 

# PF-61-040 SPECIFICATION SHEET FLANGED SEPARATOR

## Features:

- True tangential entry
- 150 psi working pressure
- Five year limited warranty
- Electrically actuated ball valve

## **Options:**

- Manual purge
- Isolation valve kit
- Wall mounting brackets/legs
- Inspection port

## SYSTEM COMPONENTS

### Separator :

- Carbon steel construction
- Fusion-bond polyester coated vessel
- Manual air bleed valve
- Inlet/Outlet pressure gauges

## **Electrical Controls :**


- NEMA 4X Enclosure
- Short circuit protection
- Purge switch selector
- Adjustable purge timer

| PRESSURE DROP vs. FLOW RATE |       |       |       |       |        |        |           |
|-----------------------------|-------|-------|-------|-------|--------|--------|-----------|
| Pressure Drop               | 3 psi | 4 psi | 6 psi | 8 psi | 10 psi | 12 psi | CV Factor |
| Flow (GPM)                  | 219   | 253   | 309   | 357   | 399    | 438    | 126.3     |

\*(Flow rate / CV values may vary slightly

To determine the approximate pressure drop at flow rates not shown in this chart, use the following formula  $\Delta$ P= (FLOW RATE / CV)<sup>2</sup>

CV Factor: CV is defined as the flow in gallons per minute (GPM) that will produce a one pound pressure drop across the separator

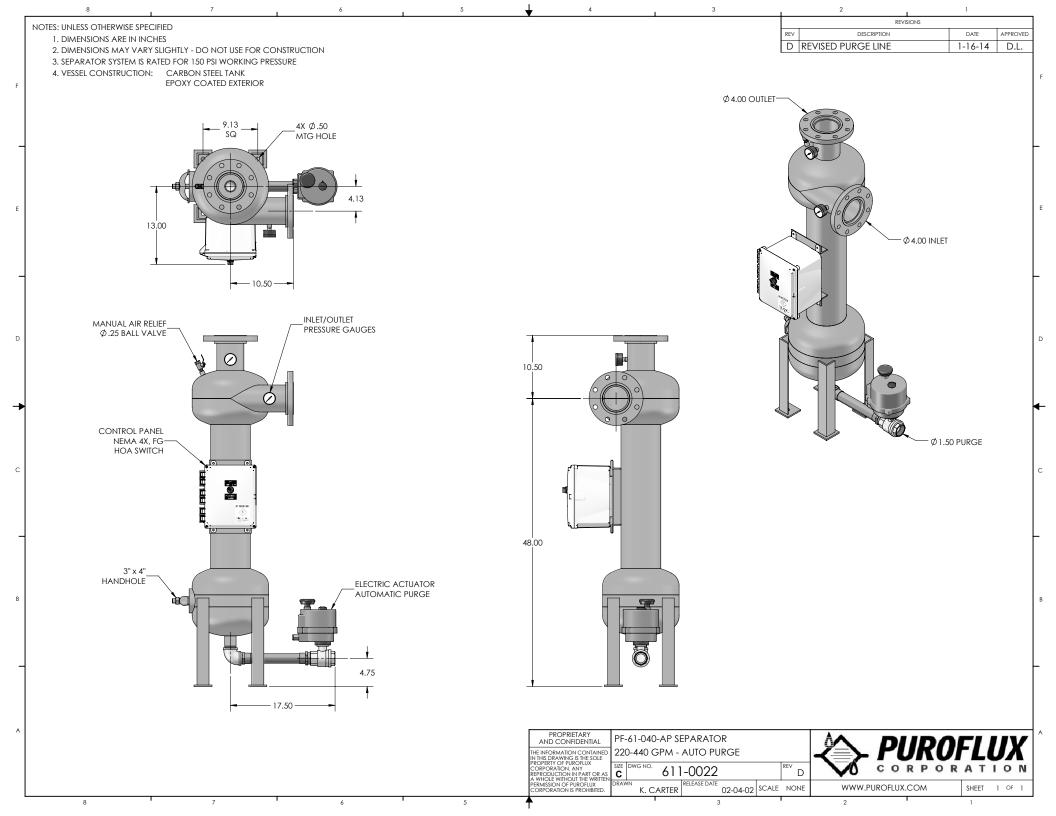



3

#### WARNING !!!!!!

D

С

В

А

THE EXTERNAL HAND WHEEL LOCATED ON THE PURGE ACTUATOR IS ONLY TO BE USED WHEN THERE IS NO POWER TO THE ACTUATOR. DISCONNECT POWER TO THE CONTROL PANEL BEFORE USING THIS FEATURE OR DAMAGE MAY OCCUR TO THE ACTUATOR.

THIS FEATURE IS FOR EMERGENCIES ONLY!

IF VALVE DOES NOT OPEN OR CLOSE FULLY ADJUST ACTUATOR CAMS TO CORRECT THE PROBLEM.



THE PUROFLUX AUTO PURGE TIMER IS EQUIPPED WITH CONTROL DIALS TO PROGRAM THE PURGING CYCLES TO MATCH YOUR SPECIFIC NEEDS.

\*\* POWER SHOULD BE TURNED OFF BEFORE CHANGING SETTINGS \*\*

#### OPERATION MODE

MIDDLE DIAL (MODE) : TIMER OPERATION MODE FACTORY SETTING : "D"


#### CYCLE TIME

LOWER DIAL (T1) : FREQUENCY OF PURGING RANGE (1H) : 36 MINUTES TO 30 HOURS FACTORY SETTING : EVERY 6 HOURS

#### PURGING TIME

UPPER DIAL (T2) : DURATION OF PURGING RANGE (1S) : 0.6 TO 30 SECONDS FACTORY SETTING : 30 SECONDS

4

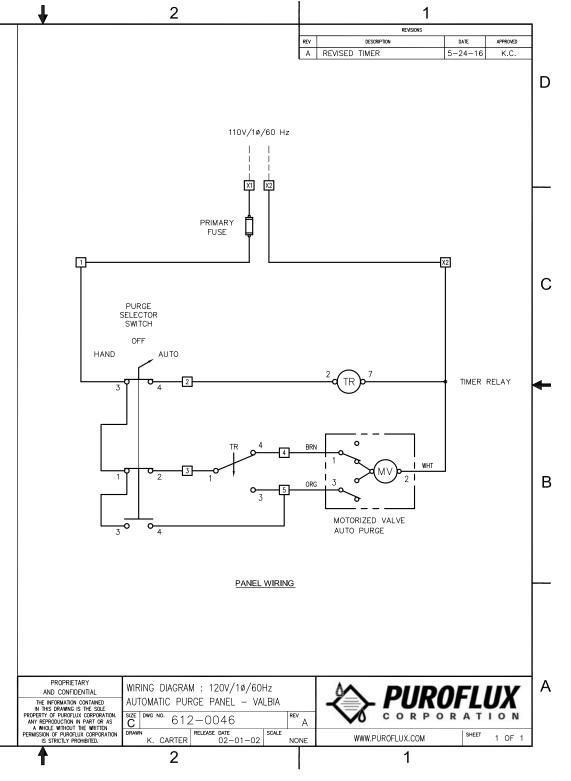

PURGING TIME PURGING TIME OPERATION MODE CYCLE TIME CYCLE TIME

OUT1 OUT2 PWR

15

3